

GSM-VAC4+ LITE

*VOICE & SMS GSM ALARM
COMMUNICATOR*



DEFAULT PARAMETER SETTINGS

1 INTRODUCTION

The default settings are valid for SW release: "Z4L_20110504_v_1_0_7.hex."

2 DEFAULT SETTINGS ON GSM-VAC4+ LITE

GSM-VAC4+ LITE PROGRAMMING TABLE	
Name	Default Value
TN1	Empty
TN2	Empty
TN3	Empty
TN4	Empty
TN5	Empty
IN1	0
IN2	0
ION	0
OS1	1
OS2	1
OD7	2
LN1	Empty
LN2	Empty
LN7	Empty
LN8	Empty
LN9	Empty
ID1	1
ID2	1
DD1	0
DD2	0
SL	0
IT1	180
IT2	180
AR1	5
AR2	5
IB1	3600
IB2	3600
#0	“User Location”, 1111
#1	“Input1”, 130
#2	“Input2”, 110
CC1	Empty
CC2	Empty
CC3	Empty
CRE	3
UDC	Empty
HTN	1
SCV	0
TST	24
MNF	0
MIC1	30
MIC2	15
MUT	0
SPK	12
BIDI	0
LCV	4
LNG	0
RTN	45

DEFAULT SETTINGS

LOT	90
CID	0
CIN	15
COUT	12
TN11	Empty
TN12	Empty
LOGN	4
ALC	1
ARST	0
LED	0
CREF	“EUR”
CTIM	“EURO”
CVODA	“DISPON. E.”
PRES	0
SPO	1

Table : default settings.